

## Installation Guide Basic Unit

*We recommend that all connections be soldered. If using wire connectors, be aware that if not secured correctly they can cause intermittent power to the device. To install without the OBDII cable:*

1. Cut the 2 pin power connector of the STE-1000 power cable.
2. Connect the Red wire to the vehicle's constant battery source.
3. Connect the Black wire to chassis ground.

Remove the dash cover and route the power cable and I/O cable through the dash and down to the bottom of the dash.



Step 1

Connect the Power Cable and, if required, the I/O cable to the Stealth. See instructions for connecting relays if you are utilizing I/O features.



Step 2

Secure the Stealth under the dash pad with an adhesive or double-sided sticky tape while making sure the serial number and label face down.



Step 3

Check the power output at the battery. You will be looking for the exact same voltage inside the car under the dash.




Step 4

With the key turned off, find the exact same voltage under the dash that you found at the battery. We recommend you tap into the OBDII connector at pin 5 (ground) and pin 16 (positive voltage)



Step 5

**Note: If you're using the starter interrupt function or other inputs/outputs, you should install and test the relays prior to connecting power to Stealth. See Output Relay Diagram for instructions on relays.**

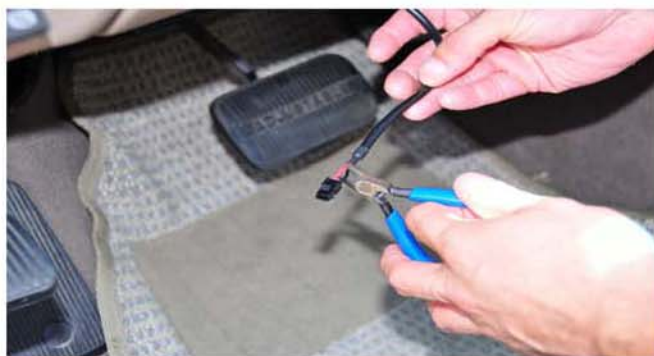

Step 6

With the power cable routed through the bottom of the dash, cut off the black 2 pin connector. Utilizing the supplied wire connectors, connect the red wire from the Power Cable to the OBDII positive voltage (pin 16) and the black wire from the Power Cable to the ground of the OBDII (pin 5). Now that power is connected, the red and green LED's should start flashing. Once the Stealth is locked and ready (up to 15 minutes), only the green LED should still be blinking. At this point, you should log into the website and perform a test locate (and/or starter disable/re-enable if used). If the Stealth responds with the correct location (and/or the starter is properly disabled/re-enabled), replace any removed dash panels and wiring. Your installation is completed.