

Kit Contents



Power Cable



I/O Cable



Relay & Socket



Stealth

Unit Overview



Not Used

Power

I/O Input

LED Lights


NOTE: The serial number/barcode faces down. Do not glue the top of the unit directly to the under-dash.

Recommended Installation Placement

Determine a suitable mounting location under the top of the dashpad for the Stealth. Ideal locations are directly under the dashpad skin, above the glove box, or above the gauge cluster.



Identify Starter Interrupt Connections

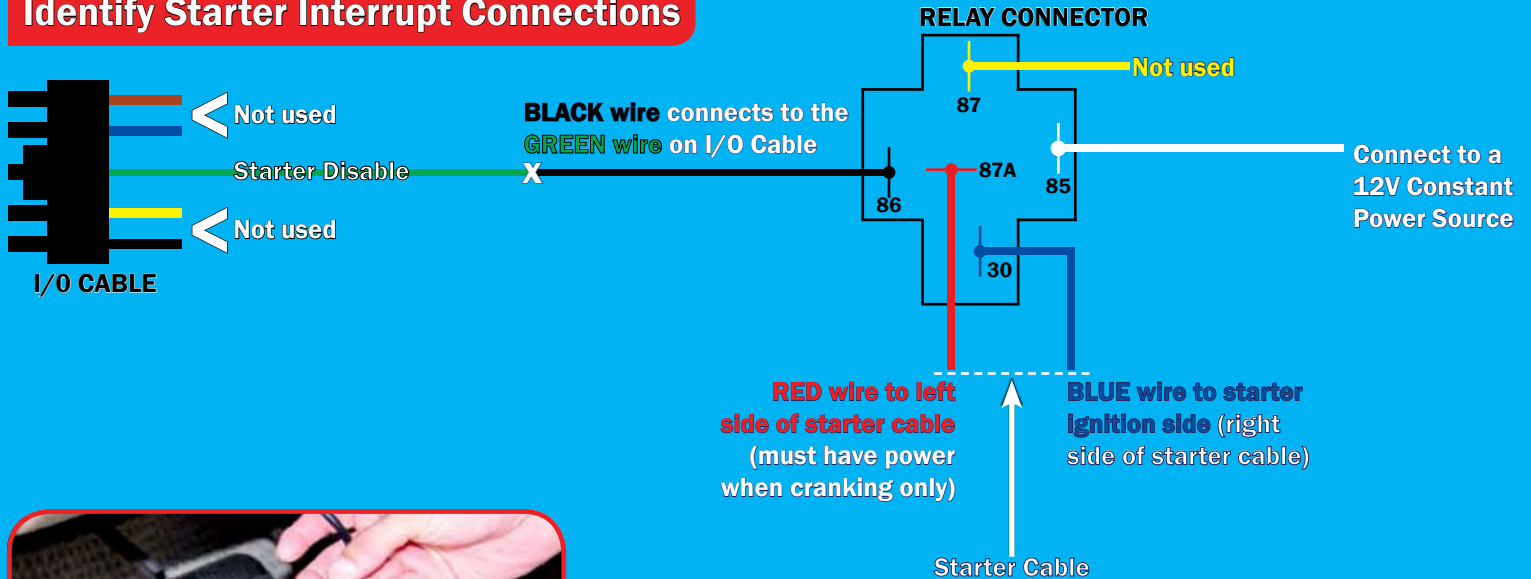

NOTE: Make sure you clip the connector at the other side of the power cable to be able to connect the black and red wires.


Now that power is connected, the **RED** and **GREEN** LED's should start flashing. Once the signal is acquired, only the **GREEN** LED should still be blinking. At this point, you should log into the website and perform a test locate (and/or starter disable/re-enable if used). If the device responds with the correct location (and/or the starter is properly disabled/re-enabled), mount the device in place and replace any removed dash panels. Your installation is complete.

NOTE: Locate vehicle first before disabling (MUST be in coverage area).



NOTE: For GPS Signal Lock, only **GREEN** Light should be blinking

Optional Installation For Starter Override

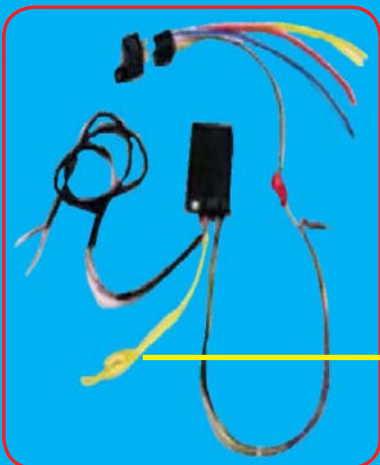

Connect **YELLOW** wire from the device's power cable to the vehicle's IGNITION wire that only has power at key-ON and crank.

Note: Wires 87A and 30 of the relay connect to each side of the STARTER wire once spliced. Locate the STARTER wire (the starter wire only has power when vehicle is started). The starter wire must be spliced in two parts, the ignition side (30) and the starter side (87A).

NOTE: Must perform a test on override when using this install option. Contact CallPass Tech Support for further testing instructions.